

# BIG LIGHT 6300


## Installation & Service Instructions

**WARNING:** disconnect main power at the source prior to installation!

*Only qualified electricians should install Delray Lighting products.*

### SERVICE

PAR lamps may be changed without removal of the bottom cover. For T8 lamp or ballast service, remove three screws of bottom cover plate as shown below.

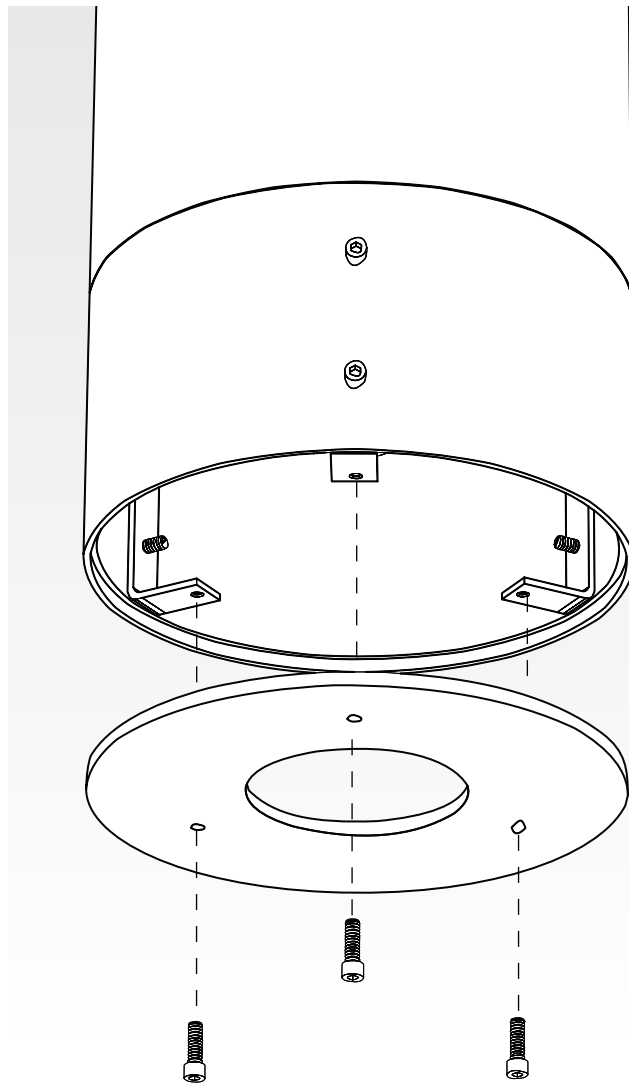

### BALLAST REMOVAL

Following removal of bottom cover, metal halide and fluorescent ballasts may be accessed by removing two additional screws (as shown, right) and sliding out ballast tray from the center tube.


### METAL HALIDE BALLASTS

MH ballasts are located in the top portion of the fixture.




### DIFFUSER CLEANING

**Warning:** Do not clean with ammonia based cleaners (e.g. Windex®). Use only water or cleaners specifically formulated for cleaning plastics.


#### PIPE MOUNT

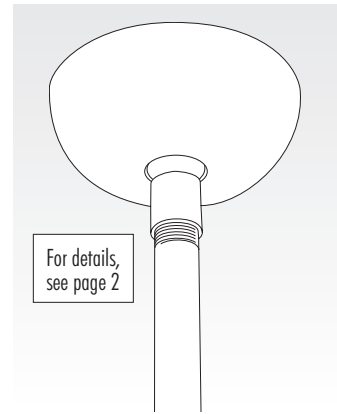

#### CABLE MOUNT

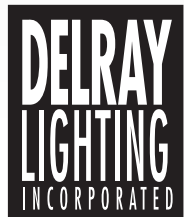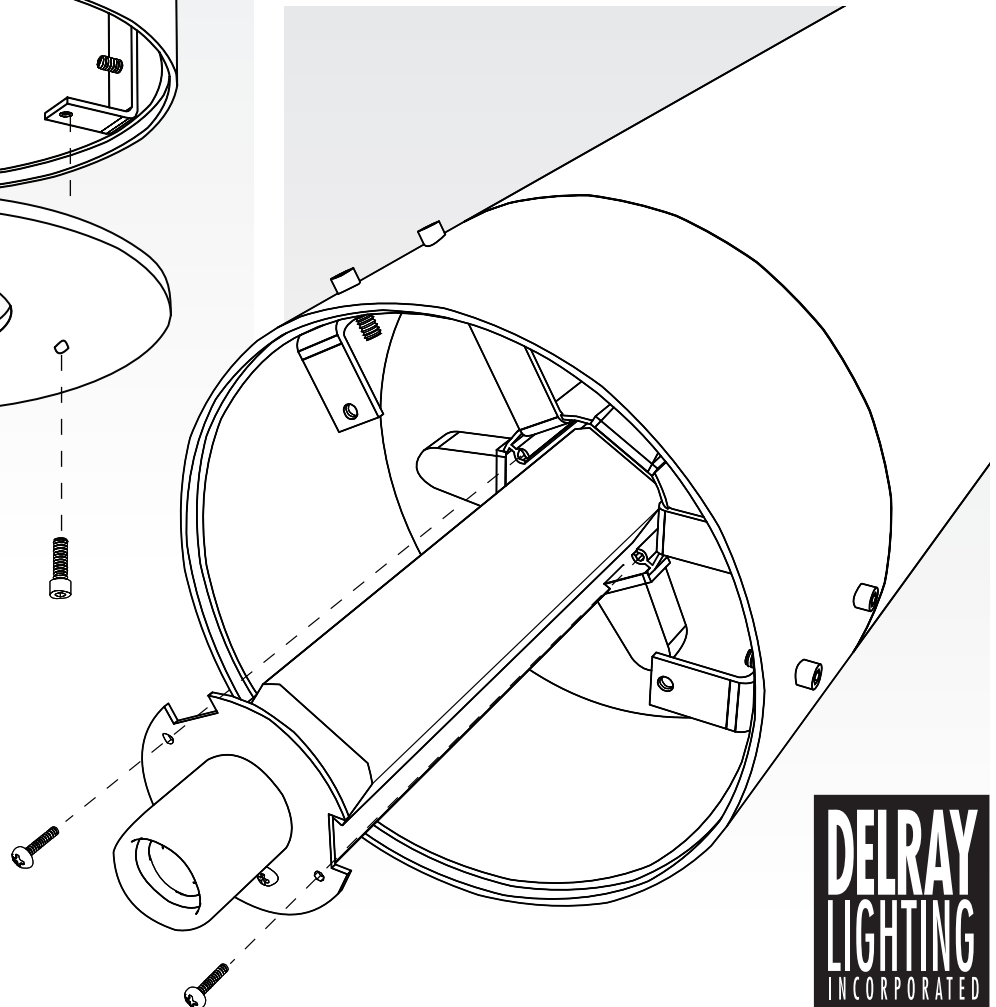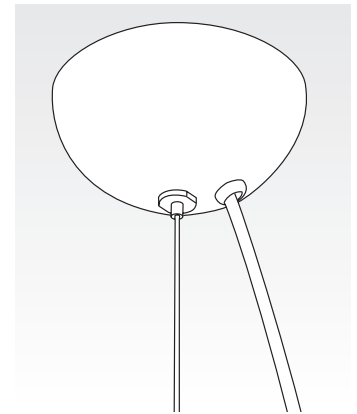

Pass power cord through ball aligner and fully thread pipe nipple into ball aligner

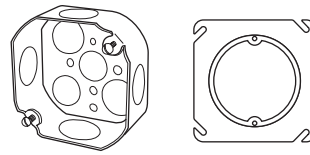

Canopy back plate attaches to octagonal J-box or mud ring.


Canopy cover slides over pipe and twist locks onto back plate.

1/2" locknut

Use pipe coupler to secure pipe to top plate, and tighten set screw.

Feed power cord through pipe.

Metal halide ballast is accessible through top (if equipped).

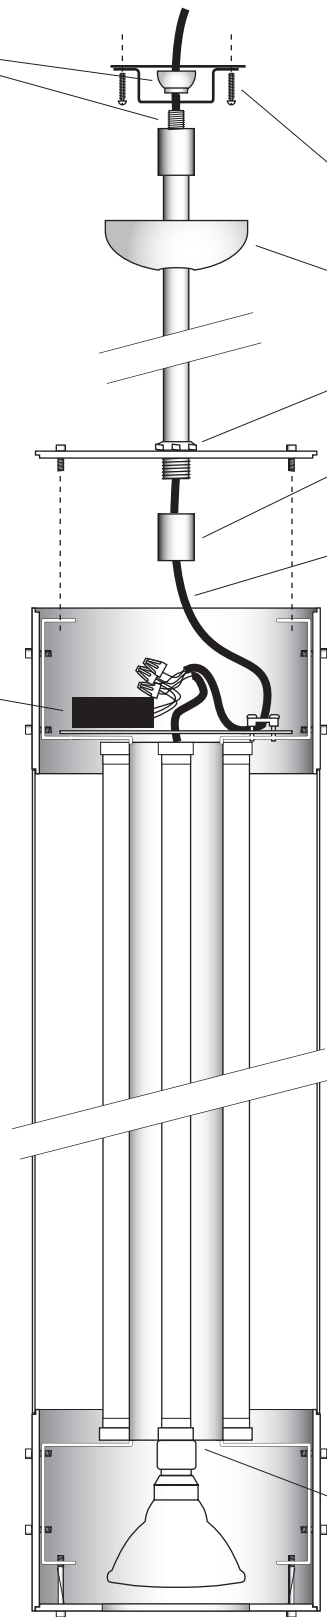

Fluorescent ballast is located in bottom of center column, serviceable from below.

Remove bottom cover plate to service lamps.