


SWING

Standard Pendant Installation

WARNING: disconnect main power at the source prior to installation!

Only qualified electricians should install Delray Lighting products.


- 1 Attach 1/2" conduit to back plate with third party threaded connector.
- 2 Remove ballast cover and ballast from back plate. Attach back plate to drywall using enclosed screws. Re-attach ballast.
- 3 Use provided clear rubber O-rings to join cable and cord together. Mount cable holders at appropriate length, with provided screws. Insert cable ends into gripper and screw gripper into cable holder. Use side exit opening in gripper holder for cable. Adjust cable length to desired position. Snip off excess cable, leaving 1" of cable extending out of the exit opening.
- 4 Insert lamp cord into end of ballast holder and adjust length. Strip wire ends to 1/4" and insert into push button connectors on ballast (red to red, black to blue) and screw down ground wire to ground terminal on back plate. Connect power to ballast and ground with cage clamp connectors provided. Use up to 14 AWG maximum. Snap off wireway knockout on one end of ballast cover for lamp cord and attach to back plate.
- 5 Slip socket covers over lamp and insert proper T5 lamp into socket, lock into place with a half turn. Slide socket covers back into position.

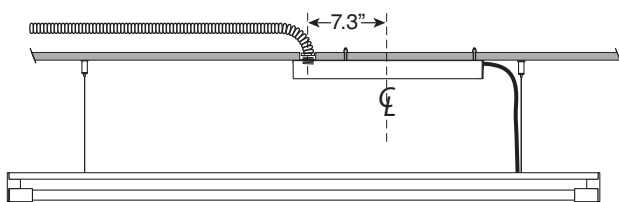

Note: Power Does Not Enter At Center

Optional Box Mount using part no. SW200

J-box mount to 3" mud ring

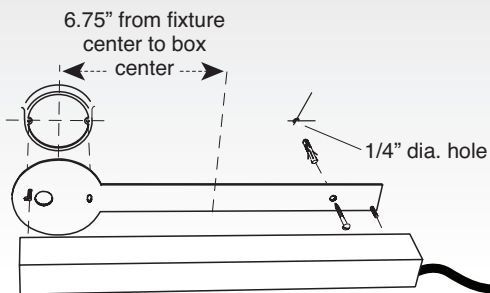

Note: align mud ring holes with fixture orientation.

